 


Bulb Replacement – Read Carefully!

Take care when replacing the bulb in order not to damage the bulb connection.

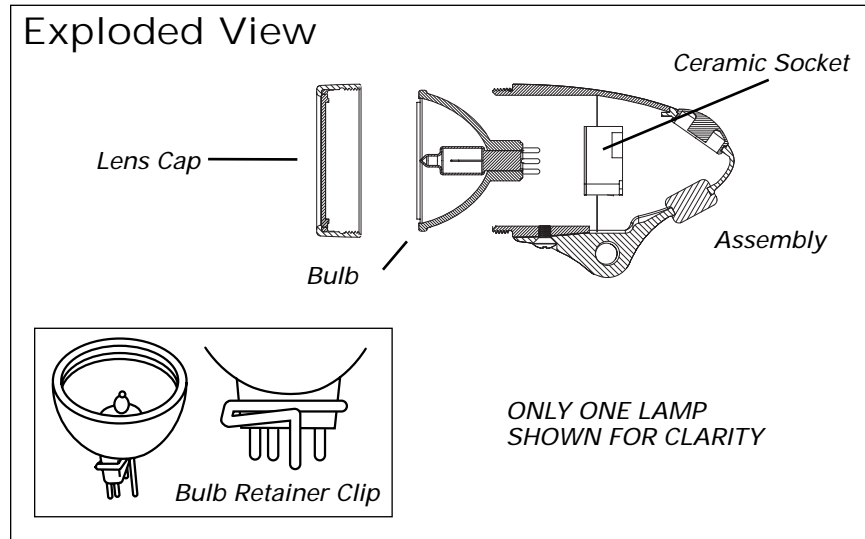 


1. Disconnect headlamp from battery pack.
2. To remove the bulb, carefully unthread the lens cap. Do not allow the bulb to rotate. It may be necessary to press down gently on the bulb while unthreading the cap.
3. Unplug the used bulb and discard it.
4. To install the bulb, first insert the two prongs of the retainer clip into the larger holes on the ceramic socket. Next, insert the bulb lead wires into the smaller holes in the socket.
5. Rethread lens cap onto housing. Make sure the lens cap thread is fully engaged with the housing. Do not plug the lamp into the battery until this step is complete.

ViewPoint™ SINGLE PRO

Owner's Manual

Helmet Mount

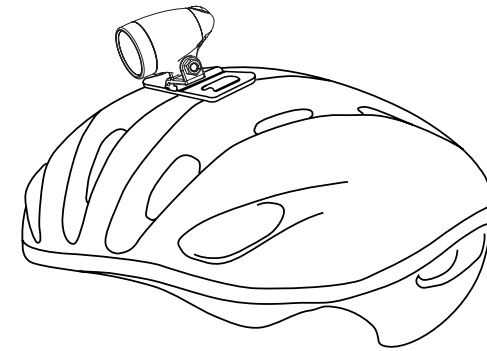

Thank you for purchasing a ViewPoint™ Single Pro light system. All ViewPoint™ light systems are constructed of the highest quality materials, such as cold-forged aluminum housings, heavy duty cords with strong positive-click connections, and halogen bulbs with dichoric glass reflectors. Your ViewPoint™ Single Pro light system produces a clean light pattern for optimum visibility and is easily recharged for continued night riding enjoyment.

Please save these instructions, as they contain important information for taking care of your ViewPoint™ light.

Installation and Use

Note: Be sure to fully charge battery before first use (see the following section for details).

The helmet mount strap secures the light to your helmet through its ventilation holes.

1. Place the light, mounted in its base, approximately a third of the way from the front of your helmet (see Figure 1).
2. Feed the strap down through one hole and up through another until it meets the "D" ring (see Figure 2).

For technical support, call 1-800-727-2453 from 9am - 6pm Monday through Friday.



Performance, Inc.

One Performance Way
Chapel Hill, NC 27514
PerformanceBike.com
Assembled in USA

 
3. Loop the strap through the "D" ring and maneuver it back down through the same hole (see Figure 3).

4. Once the strap has been pulled tight, secure the light using the provided hook and loop fastener.

5. **To operate:** To turn the headlamp on and off, push the button on the back of the headlamp housing.

6. Headlamp angle can be adjusted as desired. Loosen the assembly bolt which secures the headlamp to the base, adjust headlamp angle as desired, and securely retighten the assembly bolt.

7. Your ViewPoint™ Single Pro comes with a 12-watt spot beam bulb. Bulbs of various wattages and beam patterns are available separately to allow you to customize your light system. Please note that using a higher wattage bulb will reduce run time.

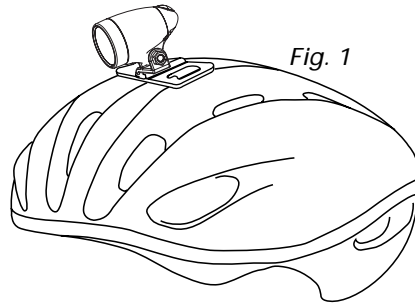

⚠ CAUTION

Avoid burns. Do not touch headlamp housing during or immediately after use. Maintain air flow over light during use.

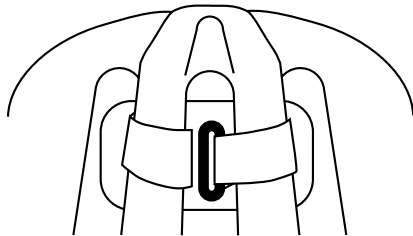 


Fig. 2

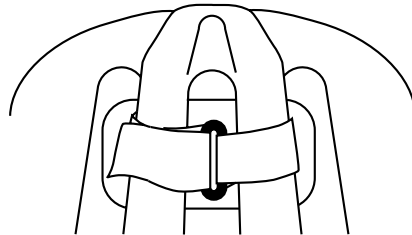 


Fig. 3

Battery Charging

1. The ViewPoint Pro Nickel Metal Hydride (NiMH) battery must be recharged using only the 7.25V 500mA NiMH compatible charger included with your light. Do not use any other charger. Using the wrong charger may damage your NiMH battery.

2. To ensure the longest battery life, recharge the battery immediately after each use, and always store the battery fully charged.

3. A full charge requires approximately 10 hours. Your ViewPoint battery charger contains a trickle charge feature which allows the battery to be left on recharge indefinitely without harm. Once the charger switches to trickle mode, it must be unplugged from the wall outlet before a new charge cycle can begin.

Also available for your ViewPoint™ System

40-0339 NiMH battery charger (use only with NiMH battery)

40-0322 NiMH 4.0 Ah (Compact) battery

00-2365 12 Watt flood bulb (30° beam)

00-8152 12 Watt spot bulb (10° beam)

40-0026 15 Watt intermediate bulb (20° beam)

00-8154 20 Watt flood bulb (30° beam)