 


Bulb Replacement – Read Carefully!

Take care when replacing the bulb in order not to damage the bulb connection.

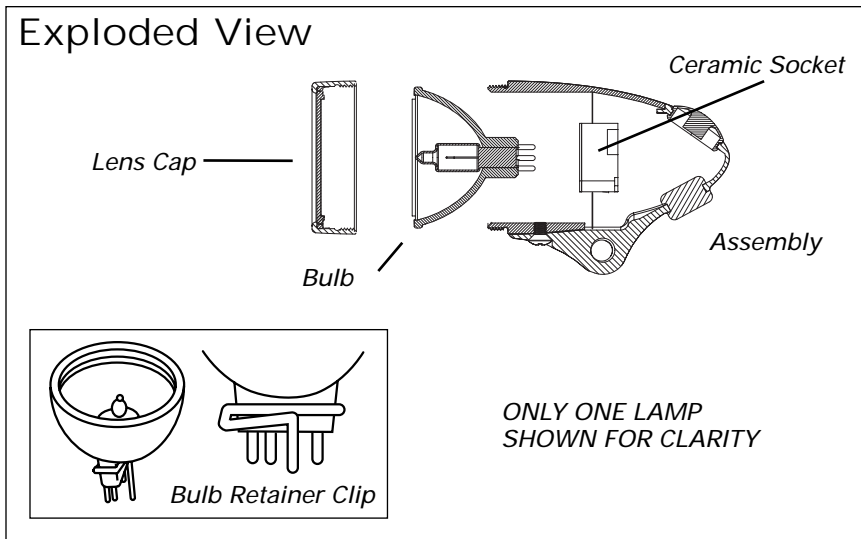 


1. Disconnect headlamp from battery pack.
2. To remove the bulb, carefully unthread the lens cap. Do not allow the bulb to rotate. It may be necessary to press down gently on the bulb lens while unthreading the cap.
3. Unplug the used bulb and discard it.
4. To install the bulb, first insert the two prongs of the retainer clip into the larger holes on the ceramic socket. Next, insert the bulb lead wires into the smaller holes in the socket.
5. Rethread lens cap onto housing. Make sure the lens cap thread is fully engaged with the housing. Do not plug the lamp into the battery until this step is complete.

PERFORMANCE[®]

ViewPoint™ SINGLE PRO Owner's Manual

Thank you for purchasing a ViewPoint™ Single Pro light system. All ViewPoint™ light systems are constructed of the highest quality materials, such as cold-forged aluminum housings, heavy duty cords with strong positive-click connections, and halogen bulbs with dichoric glass reflectors. Your ViewPoint™ Single light system produces a clean light pattern for optimum visibility and is easily recharged for continued night riding enjoyment.

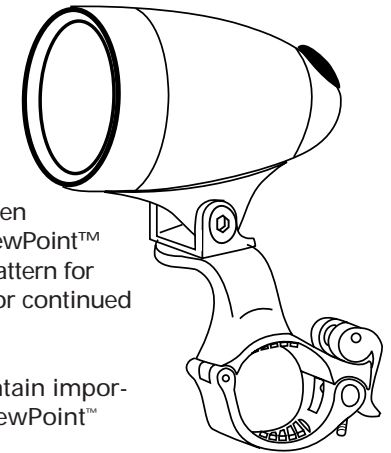

Please save these instructions, as they contain important information for taking care of your ViewPoint™ Single light.

Installation and Use

Note: Be sure to fully charge battery before first use (see the following section for details).

1. Slide the battery into your waterbottle cage, and make sure it is secure.
2. Install the headlight assembly onto your handlebar so that the headlight is positioned over the stem.
3. Open the Quick Release Clamp, close the clamp around your bar, rotate the Quick Release Lever into position on the upper part of the clamp (with the lever pointing up) and then flip the Quick Release Lever downward to lock the clamp into position (see Figure 1).
4. If the clamp diameter setting is too loose or too tight, open the quick release lever, loosen or tighten the lever as necessary to adjust clamp tightness, and close the lever to check for a secure grip on the bar.

 
For technical support, call 1-800-727-2453 from 9am - 6pm Monday through Friday.



Performance, Inc.

One Performance Way
Chapel Hill, NC 27514
PerformanceBike.com
Assembled in USA

ViewPoint™ SINGLE PRO

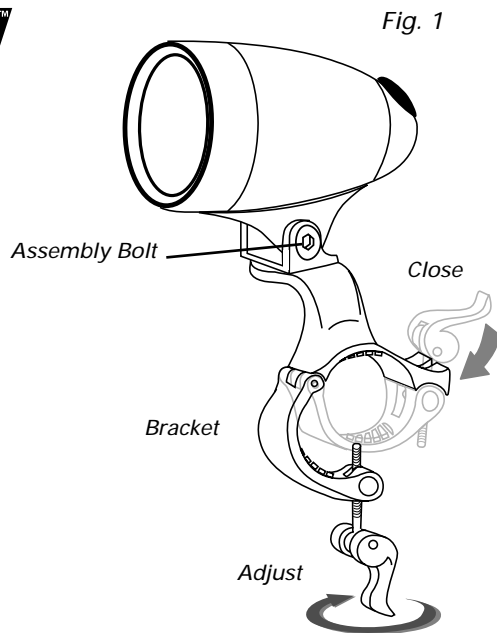

- Once the clamp tightness is adjusted correctly, position your light as desired.
MAKE SURE THE CLAMP IS TIGHT ENOUGH THAT IT WILL NOT MOVE ON THE BAR FROM VIBRATION OR BUMPS.
- Connect the battery cord to the light cord and snap the cords firmly together. Excess cord can be stored inside the battery bottle by pushing it down through the opening on the top. Loosen the plastic nut, push excess cord into the bottle, and tighten the nut. Be sure to leave enough cord slack to permit free movement of the handlebars.
- To operate:** Push the switch on the back of the light housing.
- Headlamp angle can be adjusted as desired. Loosen the assembly bolt which secures the headlamp to the base, adjust headlamp angle as desired, and securely retighten the assembly bolt.
- To remove the headlight from the handlebar, open the quick release lever at the rear of the clamp, and remove from the bar.
- Your ViewPoint Single Pro comes with a 15-watt bulb, which has an intermediate 20 degree beam pattern. Bulbs of various wattages and beam patterns are available separately to allow you to customize your light system. Please note that using a higher wattage bulb will reduce run time.

⚠ CAUTION

Avoid burns. Do not touch headlamp housing during or immediately after use. Maintain air flow over light during use.

Battery Charging

- The ViewPoint Pro Nickel Metal Hydride (NiMH) battery must be recharged using only the 7.25V 500mA NiMH compatible charger included with your light. Do not use any other charger. Using the wrong charger may damage your NiMH battery.
- To ensure the longest battery life, recharge the battery immediately after each use, and always store the battery fully charged.
- A full charge requires approximately 10 hours. Your ViewPoint battery charger contains a trickle charge feature which allows the battery to be left on recharge indefinitely without harm. Once the charger switches to trickle mode, it must be unplugged from the wall outlet before a new charge cycle can begin.

Also available for your Viewpoint™ System

- 40-0323 NiMH 4.0 Ahr battery (requires NiMH battery charger)
- 00-2365 12-watt flood bulb (30° beam)
- 00-8152 12-watt spot bulb (10° beam)
- 40-0026 15-watt intermediate bulb (20° beam)
- 00-8154 20-watt flood bulb (30° beam)
- 40-0324 NiMH 6.0 Ahr waterbottle style battery (replacement battery for View Point™ Dual Pro, longer run time but same physical dimensions as View Point™ Single Pro battery)
- 40-0339 NiMH battery charger (use only with NiMH battery)