


Hurricane Floor Pump

INSTRUCTIONS FOR TIRE INFLATION

1. Remove the dust cap from your tire valve.
2. If you have Presta valves (long, skinny with a locking barrel) unscrew the metal locking barrel at the tip of the valve. Refer to figure below to determine which valve opening is needed. Remove threaded cap and position the rubber gasket and pin as required.
3. Depress the tip of either type valve in order to ensure that the valve doesn't stick and to blow out any dirt or other contaminants that may have settled there.
4. Press pump head over the valve, and rotate the thumb lock lever until it is perpendicular to the hose (see figure below).
5. Before inflating, align the indicator arrow on the gauge bezel with the desired pressure reading. Then inflate the tire to the desired pressure.
6. Release the thumb lock lever and remove the pump head from the valve.
7. If you have Presta valves, screw down the locking barrel at the tip of the valve.
8. Replace the tire valve dust cap.

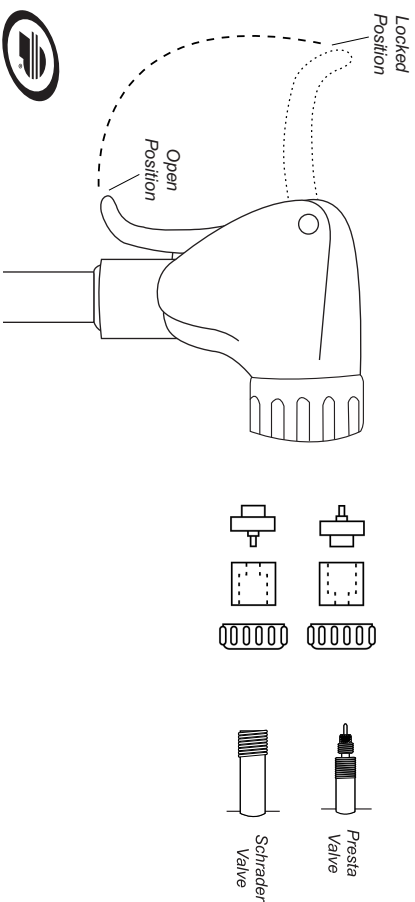

Performance, Inc.
One Performance Way
Chapel Hill, N.C. 27514
Made in Taiwan

www.performancebike.com

PERFORMANCE and the Flying P Logo are registered marks of Performance, Inc.


40-1574 1202_1

Performance Tech Support 1(800)727-2453
9am-6pm EST Monday-Friday

Hurricane Floor Pump

INSTRUCTIONS FOR TIRE INFLATION

1. Remove the dust cap from your tire valve.
2. If you have Presta valves (long, skinny with a locking barrel) unscrew the metal locking barrel at the tip of the valve. Refer to figure below to determine which valve opening is needed. Remove threaded cap and position the rubber gasket and pin as required.
3. Depress the tip of either type valve in order to ensure that the valve doesn't stick and to blow out any dirt or other contaminants that may have settled there.
4. Press pump head over the valve, and rotate the thumb lock lever until it is perpendicular to the hose (see figure below).
5. Before inflating, align the indicator arrow on the gauge bezel with the desired pressure reading. Then inflate the tire to the desired pressure.
6. Release the thumb lock lever and remove the pump head from the valve.
7. If you have Presta valves, screw down the locking barrel at the tip of the valve.
8. Replace the tire valve dust cap.

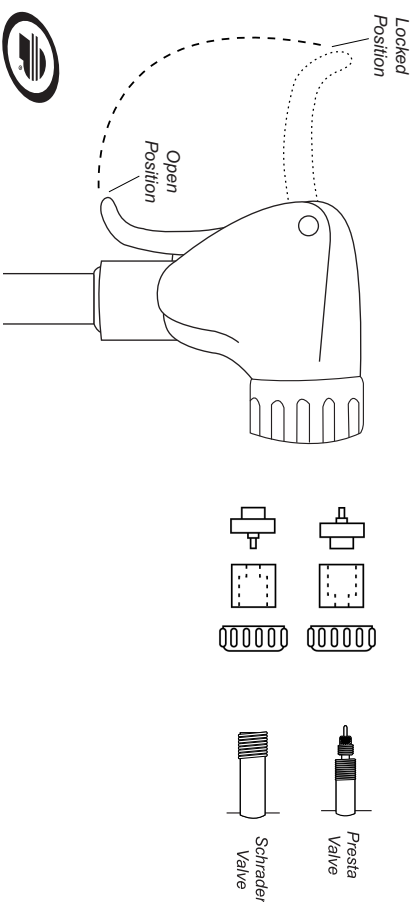

Performance, Inc.
One Performance Way
Chapel Hill, N.C. 27514
Made in Taiwan

www.performancebike.com

PERFORMANCE and the Flying P Logo are registered marks of Performance, Inc.

40-1574 1202_1

Performance Tech Support 1(800)727-2453
9am-6pm EST Monday-Friday