

ViewPoint

flashpoint taillight

Battery Installation

1. Insert coin in slot at side of cover and twist to remove cover (Fig.1).
2. Insert two "AAA" batteries according to orientation diagram inside case.
3. Replace cover and press firmly to snap shut.

Bracket Installation

1. Attach bracket to seatpost so that "UP" arrow is pointing up (Fig.2). Use supplied rubber shims as necessary to ensure a secure fit.
2. Tighten bracket bolt until bracket is secure on seatpost.
3. Attach light to bracket by sliding light clip onto bracket (Fig.3). Ensure light is securely attached to bracket before riding.
4. Adjust orientation of bracket to position light in an optimal direction.

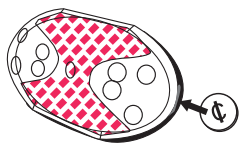


Fig. 1

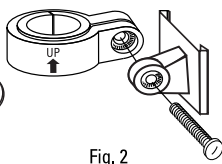


Fig. 2

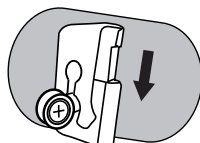


Fig. 3

Performance Inc.
One Performance Way
Chapel Hill, NC 27514
Made in Taiwan
PerformanceBike.com

PERFORMANCE and the Flying P are registered marks of Performance Inc.



40-2175 1004_1

Tech Support Line 1-800-553-8324

ViewPoint

flashpoint taillight

Battery Installation

1. Insert coin in slot at side of cover and twist to remove cover (Fig.1).
2. Insert two "AAA" batteries according to orientation diagram inside case.
3. Replace cover and press firmly to snap shut.

Bracket Installation

1. Attach bracket to seatpost so that "UP" arrow is pointing up (Fig.2). Use supplied rubber shims as necessary to ensure a secure fit.
2. Tighten bracket bolt until bracket is secure on seatpost.
3. Attach light to bracket by sliding light clip onto bracket (Fig.3). Ensure light is securely attached to bracket before riding.
4. Adjust orientation of bracket to position light in an optimal direction.

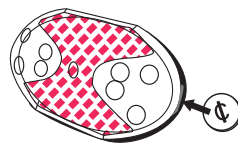


Fig. 1

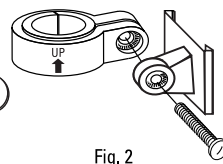


Fig. 2

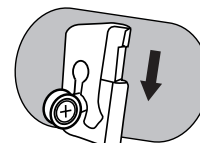


Fig. 3

Performance Inc.
One Performance Way
Chapel Hill, NC 27514
Made in Taiwan
PerformanceBike.com

PERFORMANCE and the Flying P are registered marks of Performance Inc.



40-2175 1004_1

Tech Support Line 1-800-553-8324

ViewPoint

flashpoint taillight

Battery Installation

1. Insert coin in slot at side of cover and twist to remove cover (Fig.1).
2. Insert two "AAA" batteries according to orientation diagram inside case.
3. Replace cover and press firmly to snap shut.

Bracket Installation

1. Attach bracket to seatpost so that "UP" arrow is pointing up (Fig.2). Use supplied rubber shims as necessary to ensure a secure fit.
2. Tighten bracket bolt until bracket is secure on seatpost.
3. Attach light to bracket by sliding light clip onto bracket (Fig.3). Ensure light is securely attached to bracket before riding.
4. Adjust orientation of bracket to position light in an optimal direction.

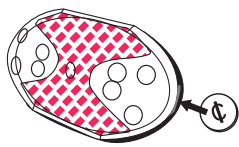


Fig. 1

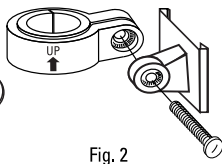


Fig. 2

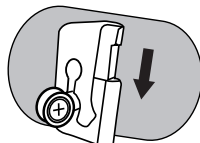


Fig. 3

Performance Inc.
One Performance Way
Chapel Hill, NC 27514
Made in Taiwan
PerformanceBike.com

PERFORMANCE and the Flying P are registered marks of Performance Inc.



40-2175 1004_1

Tech Support Line 1-800-553-8324

ViewPoint

flashpoint taillight

Battery Installation

1. Insert coin in slot at side of cover and twist to remove cover (Fig.1).
2. Insert two "AAA" batteries according to orientation diagram inside case.
3. Replace cover and press firmly to snap shut.

Bracket Installation

1. Attach bracket to seatpost so that "UP" arrow is pointing up (Fig.2). Use supplied rubber shims as necessary to ensure a secure fit.
2. Tighten bracket bolt until bracket is secure on seatpost.
3. Attach light to bracket by sliding light clip onto bracket (Fig.3). Ensure light is securely attached to bracket before riding.
4. Adjust orientation of bracket to position light in an optimal direction.

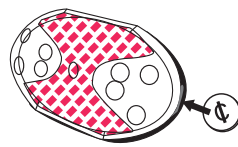


Fig. 1

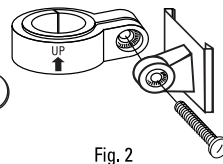


Fig. 2

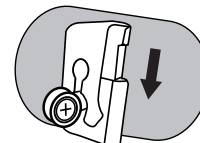


Fig. 3

Performance Inc.
One Performance Way
Chapel Hill, NC 27514
Made in Taiwan
PerformanceBike.com

PERFORMANCE and the Flying P are registered marks of Performance Inc.



40-2175 1004_1

Tech Support Line 1-800-553-8324