


Hurricane TEAM Floor Pump**INSTRUCTIONS FOR TIRE INFLATION**

1. Remove dust cap from tire valve.
2. For Presta valves, unscrew metal locking barrel at tip of valve.
3. Depress tip of either type valve to ensure valve doesn't stick and to blow out any contaminants.
4. Press dual Presta/Schrader pump head onto tire valve stem as far as it will go, and lift thumb lock lever to the "locked" position.
5. For easier reading, rotate gauge bezel to align indicator arrow on bezel with desired pressure reading on gauge.
6. Inflate tire to desired pressure. Do not inflate beyond maximum recommended inflation pressure printed on tire sidewall.
7. Press bleed valve to adjust pressure.
8. Release thumb lock lever and remove pump head from valve stem.
9. For Presta valves, screw down locking barrel at valve tip. Replace valve stem dust cap.

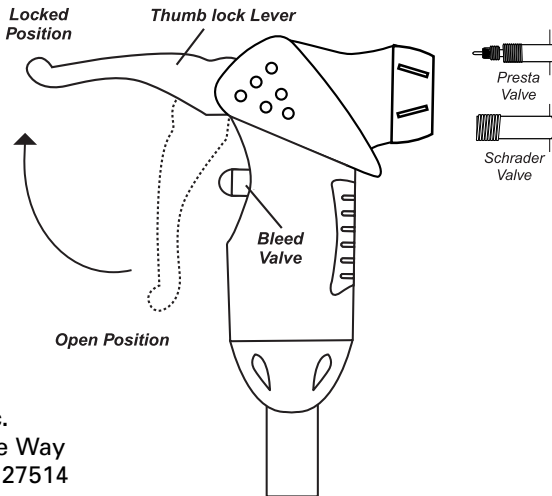

Performance, Inc.
 One Performance Way
 Chapel Hill, N.C. 27514
 Made in Taiwan
www.performancebike.com


PERFORMANCE and the Flying P Logo are registered marks of Performance, Inc.

40-2176 0904_1

Performance Tech Support 1(800)553-8324
9am-6pm EST Monday-Friday

Hurricane TEAM Floor Pump**INSTRUCTIONS FOR TIRE INFLATION**

1. Remove dust cap from tire valve.
2. For Presta valves, unscrew metal locking barrel at tip of valve.
3. Depress tip of either type valve to ensure valve doesn't stick and to blow out any contaminants.
4. Press dual Presta/Schrader pump head onto tire valve stem as far as it will go, and lift thumb lock lever to the "locked" position.
5. For easier reading, rotate gauge bezel to align indicator arrow on bezel with desired pressure reading on gauge.
6. Inflate tire to desired pressure. Do not inflate beyond maximum recommended inflation pressure printed on tire sidewall.
7. Press bleed valve to adjust pressure.
8. Release thumb lock lever and remove pump head from valve stem.
9. For Presta valves, screw down locking barrel at valve tip. Replace valve stem dust cap.

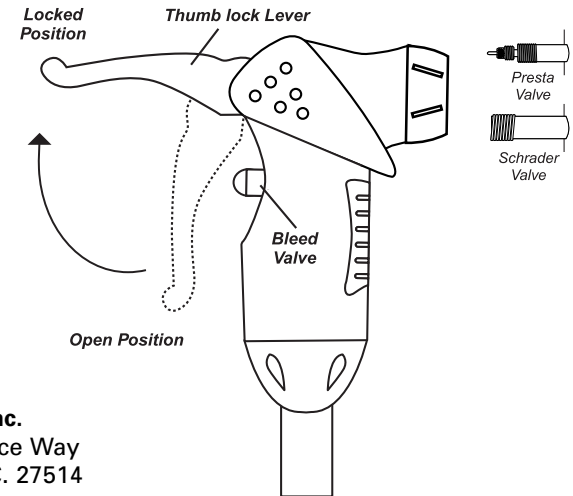

Performance, Inc.
 One Performance Way
 Chapel Hill, N.C. 27514
 Made in Taiwan
www.performancebike.com

PERFORMANCE and the Flying P Logo are registered marks of Performance, Inc.

40-2176 0904_1

Performance Tech Support 1(800)553-8324
9am-6pm EST Monday-Friday