


Instructions for Tire Inflation

1. Remove dust cap from tire valve.
2. For Presta valves, unscrew metal locking barrel at tip of valve.
3. Depress tip of either type valve to ensure valve doesn't stick and to blow out any contaminants.
4. Press dual Presta/Schrader pump head onto tire valve stem as far as it will go, and lift thumb lock lever to the "locked" position.
5. For easier reading, rotate gauge bezel to align indicator arrow on bezel with desired pressure reading on gauge.
6. Inflate tire to desired pressure. Do not inflate beyond maximum recommended inflation pressure printed on tire sidewall.
7. Release thumb lock lever and remove pump head from valve stem.
8. For Presta valves, screw down locking barrel at valve tip. Replace valve stem dust cap.

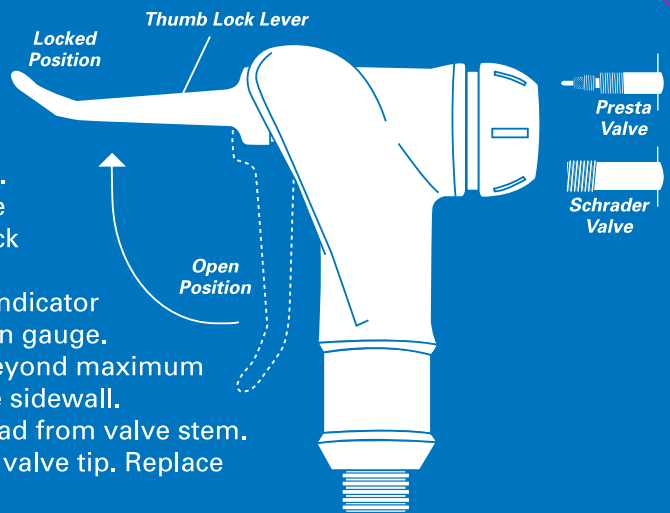

Performance Inc.
One Performance Way
Chapel Hill, NC 27514
Made in Taiwan
PerformanceBike.com
PERFORMANCE and the Flying P are
registered marks of Performance Inc.

Tech Support Line 1-800-553-8324

40-2201



Hurricane Essential
Floor Pump

KEYLINES DO NOT PRINT
ART @ 100%

COLORS USED: ■ PMS 2935
■ BLACK
□ WHITE

Performance Bicycle® PROOF NO. _____ Graphics _____ PD _____ PM _____

Hurricane Essential Floor Pump Back 11/3/2004