 


viewpoint Lazer LED Headlight

 
Battery Installation

1. Press the release buttons (A) on both sides of the case and remove battery cradle (B) from the case. See Figure 1.
2. Install 4 "AAA" batteries according to the "+" and "-" symbols inside the battery cradle.
3. Slide the battery cradle back into the light case and press firmly to close.

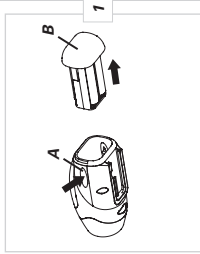

Bracket Installation

1. Unthread the quick release thumb lever (C) completely from the mounting bracket (D) as shown in Figure 2 and place the bracket on the bar. Use supplied rubber shims as necessary to ensure a secure fit on smaller diameter bars.
2. Thread the quick release thumb lever back into the bracket and flip the lever upward to tighten the bracket securely on the handlebar.
3. Attach the light to the bracket by sliding it onto the bracket from front to back until you hear a "CLICK". Ensure the light is securely attached before riding. The light can be rotated a few degrees from side to side to position it in the optimal direction. See figure 3.
4. To remove the light, press the release tab (E) on the side of the bracket and slide the light forward. See figure 2.

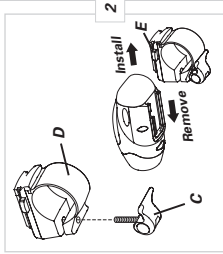


Using Your Light

1. Press the power button (F) once to turn on the high beam, again to activate the low beam and a third time to turn off the light.
2. While the high beam is on, the green LED indicator will illuminate. In low beam mode, the green LED indicator will flash.
3. When the battery charge is low, the red LED indicator will illuminate.

Charging

 1. For best performance, fully charge the ViewPoint Lazer batteries before the first use.
2. When the battery charge is low, the red LED indicator will illuminate. Turn off the light and recharge the batteries before they are fully drained.
3. To recharge your light, plug the charger cord into the charging port (G) on the underside of the light. See Figure 3.
4. Charge your ViewPoint Lazer batteries using only the charger supplied with your light. Do not use any other charger. Using the wrong charger may cause the batteries to overheat, leak or explode.
5. To ensure maximum battery life, do not store your batteries in a drained state. Always recharge the batteries as soon as possible after the low battery indicator appears, and always store them with a full charge.
6. Fully charging the batteries requires approximately 4 to 5 hours.
7. Do not leave the light connected to the charger for more than 24 hours.

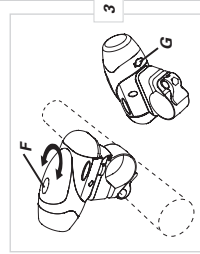

*Please read cautions on back

viewpoint Lazer LED Headlight

Battery Installation

1. Press the release buttons (A) on both sides of the case and remove battery cradle (B) from the case. See Figure 1.
2. Install 4 "AAA" batteries according to the "+" and "-" symbols inside the battery cradle.
3. Slide the battery cradle back into the light case and press firmly to close.

Bracket Installation

1. Unthread the quick release thumb lever (C) completely from the mounting bracket (D) as shown in Figure 2 and place the bracket on the bar. Use supplied rubber shims as necessary to ensure a secure fit on smaller diameter bars.
2. Thread the quick release thumb lever back into the bracket and flip the lever upward to tighten the bracket securely on the handlebar.
3. Attach the light to the bracket by sliding it onto the bracket from front to back until you hear a "CLICK". Ensure the light is securely attached before riding. The light can be rotated a few degrees from side to side to position it in the optimal direction. See figure 3.
4. To remove the light, press the release tab (E) on the side of the bracket and slide the light forward. See figure 2.

Using Your Light

1. Press the power button (F) once to turn on the high beam, again to activate the low beam and a third time to turn off the light.
2. While the high beam is on, the green LED indicator will illuminate. In low beam mode, the green LED indicator will flash.
3. When the battery charge is low, the red LED indicator will illuminate.

Charging

1. For best performance, fully charge the ViewPoint Lazer batteries before the first use.
2. When the battery charge is low, the red LED indicator will illuminate. Turn off the light and recharge the batteries before they are fully drained.
3. To recharge your light, plug the charger cord into the charging port (G) on the underside of the light. See Figure 3.
4. Charge your ViewPoint Lazer batteries using only the charger supplied with your light. Do not use any other charger. Using the wrong charger may cause the batteries to overheat, leak or explode.
5. To ensure maximum battery life, do not store your batteries in a drained state. Always recharge the batteries as soon as possible after the low battery indicator appears, and always store them with a full charge.
6. Fully charging the batteries requires approximately 4 to 5 hours.
7. Do not leave the light connected to the charger for more than 24 hours.

*Please read cautions on back



⚠ CAUTION

1. Charger intended for use with NiMH rechargeable batteries only. Attempts to charge other battery types may cause batteries to overheat, leak or explode.
2. For indoor use only. Do not expose charger to rain or moisture.
3. Only use the charger supplied with this light. Using an incompatible charger may damage the light or batteries or cause fire or electric shock.
4. Do not charge batteries for more than 24 hours, as this may damage the batteries.
5. Disconnect charger from power source when not in use and before installing or removing batteries.
6. Do not use extension cords or any other attachment not recommended by the manufacturer. Doing so may result in risk of fire or electric shock.
7. Do not operate charger if it has been damaged or dropped.

⚠ CAUTION

1. Charger intended for use with NiMH rechargeable batteries only. Attempts to charge other battery types may cause batteries to overheat, leak or explode.
2. For indoor use only. Do not expose charger to rain or moisture.
3. Only use the charger supplied with this light. Using an incompatible charger may damage the light or batteries or cause fire or electric shock.
4. Do not charge batteries for more than 24 hours, as this may damage the batteries.
5. Disconnect charger from power source when not in use and before installing or removing batteries.
6. Do not use extension cords or any other attachment not recommended by the manufacturer. Doing so may result in risk of fire or electric shock.
7. Do not operate charger if it has been damaged or dropped.

Tech Support 1(800)553-8324

Tech Support 1(800)553-8324

Made in Taiwan

40-3877 1007_1

Made in Taiwan

40-3877 1007_1