


ASCENT

FORCE HG FLOOR PUMP

INSTRUCTIONS FOR TIRE INFLATION

1. Remove the dust cap from your tire valve.
2. If you have Presta valves (long, skinny with a locking barrel) unscrew the metal locking barrel at the tip of the valve. Refer to figure below to determine which valve opening is needed.
3. Depress the tip of either type valve in order to ensure that the valve doesn't stick and to blow out any dirt or other contaminants that may have settled there.
4. Press pump head over the valve, and rotate the thumb lock lever until it is perpendicular to the hose (see figure below).
5. Inflate the tire to the desired pressure.
6. Release the thumb lock lever and remove the pump head from the valve.
7. If you have Presta valves, screw down the locking barrel at the tip of the valve.
8. Replace the tire valve dust cap.

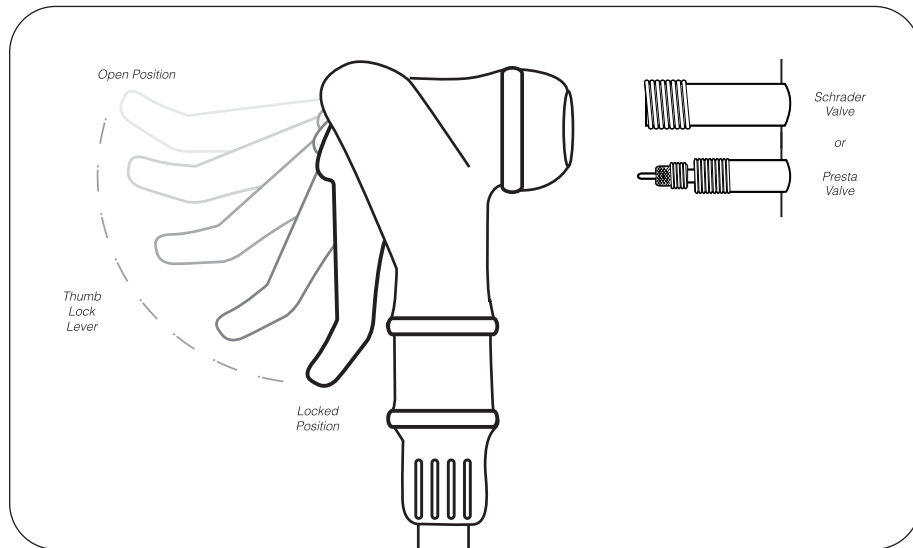

ASCENT

FORCE HG FLOOR PUMP

INSTRUCTIONS FOR TIRE INFLATION

1. Remove the dust cap from your tire valve.
2. If you have Presta valves (long, skinny with a locking barrel) unscrew the metal locking barrel at the tip of the valve. Refer to figure below to determine which valve opening is needed.
3. Depress the tip of either type valve in order to ensure that the valve doesn't stick and to blow out any dirt or other contaminants that may have settled there.
4. Press pump head over the valve, and rotate the thumb lock lever until it is perpendicular to the hose (see figure below).
5. Inflate the tire to the desired pressure.
6. Release the thumb lock lever and remove the pump head from the valve.
7. If you have Presta valves, screw down the locking barrel at the tip of the valve.
8. Replace the tire valve dust cap.

