



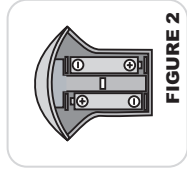

JET SET L.E.D. TAILLIGHT



I. Battery Installation

1. To open the battery compartment lid, remove the screw (A) from the bottom of the case, and lift up on the lid. See Figure 1.
2. Insert 2 "AAA" batteries, ensuring battery orientation matches the diagram inside the battery case. See Figure 2.
3. Replace the lid, close it firmly and retighten the screw on the bottom of the case.

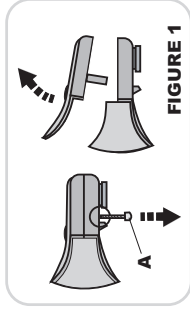

II. Light Installation

1. Attach the mounting bracket (B) to the seatpost as shown in Figure 3 and tighten the thumb screw (C) securely. Use the supplied rubber shim as necessary to ensure a secure fit.
2. Attach the light to the bracket. Slide the light onto the bracket as shown in Figure 3. Ensure light is securely attached to bracket before riding.
3. To remove the light, press the release tab (D) and slide the light out of the bracket. See Figure 4.

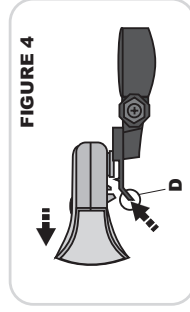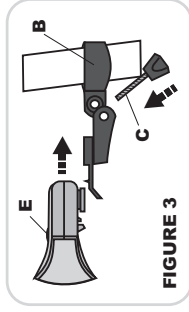

III. To Operate



1. Press the power button (E) to advance through the four light modes in the following order:
FLASH – CHASE – RANDOM – STEADY – OFF



JET SET L.E.D. TAILLIGHT



I. Battery Installation

1. To open the battery compartment lid, remove the screw (A) from the bottom of the case, and lift up on the lid. See Figure 1.
2. Insert 2 "AAA" batteries, ensuring battery orientation matches the diagram inside the battery case. See Figure 2.
3. Replace the lid, close it firmly and retighten the screw on the bottom of the case.

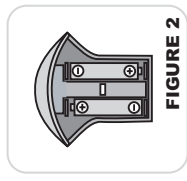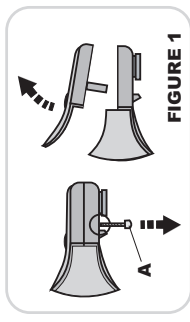

II. Light Installation

1. Attach the mounting bracket (B) to the seatpost as shown in Figure 3 and tighten the thumb screw (C) securely. Use the supplied rubber shim as necessary to ensure a secure fit.
2. Attach the light to the bracket. Slide the light onto the bracket as shown in Figure 3. Ensure light is securely attached to bracket before riding.
3. To remove the light, press the release tab (D) and slide the light out of the bracket. See Figure 4.

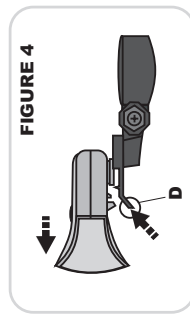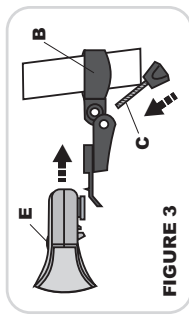

III. To Operate

1. Press the power button (E) to advance through the four light modes in the following order:
FLASH – CHASE – RANDOM – STEADY – OFF