

Baby
Trans It
solo LX

stroller

Congratulations on your purchase of a Baby Trans It Solo LX Stroller! Please read the following instructions carefully to ensure its safe use.



Stroller Assembly

1. Remove the stroller and wheels from the box. Lay the stroller on the ground with the foot plate facing down and the handle facing up. See Figure 1.
2. Grip the handle and pull up to unfold the stroller. See Figure 2.
3. At the point where the frame pivots to fold, press the black frame latches until they securely snap over the frame tubing. You should hear an audible 'CLICK' indicating they are secure.
4. Secure the lower seat straps to each side of the stroller frame by looping the straps around the frame and securing the snap buttons. See Figure 3.
5. Secure the front panel of the seat (the leg rest area) to the foot plate with the hook and loop strip on the back side of the panel. Then secure the hook and loop strap behind the foot plate.



Figure 1

Wheel Installation

Rear Wheels

1. The rear tire sidewalls are marked with an arrow indicating proper rotation direction. On a stroller, however, tread direction is not critical; either wheel can be installed on either side of the stroller.
2. Remove and discard the foam protectors from the wheel axles.
3. To install the rear wheels, slide the wheel axle into the stroller frame tube. You should hear an audible 'CLICK', indicating the wheel is secure. Pull on the wheel to make sure it is installed securely.



Figure 2

Front Wheel

1. To install the front wheel, stand at the front of the stroller and tip the stroller back so that it rests on the handle and rear wheels.
2. Remove the fork tip protectors from the stroller fork, and open the brake quick release lever by flipping the lever toward the rear of the stroller (this opens the brake calipers to facilitate wheel installation). See Figure 4.

3. Fit the front wheel between the brake pads and slide the flat sides of the wheel axle into the fork tip drop-outs. Slide the axle as far into the drop-outs as possible. See Figure 5.

4. Secure the front wheel with the quick release skewer. See Figure 6. Tighten the nut on the quick release skewer so that the lever end requires enough force in closing to leave an imprint on your hand. If the quick release lever closes too easily, or does not close completely, open the lever and further adjust the nut side of the skewer one or two turns. Repeat this process until the lever closes completely, and requires enough force in closing that it leaves an imprint on your hand. When fully closed, the quick release lever should be flush with the fork blade. See Figure 7. Pull on the wheel to make sure it is installed securely.

Note: If you are not familiar with the operation of a quick release skewer, consult a qualified bicycle mechanic, or contact Performance Tech Support.

5. Close the brake quick release lever by flipping the lever toward the front of the stroller. The front brake will not operate effectively unless the brake quick release lever is fully closed. See Figure 8.

6. The Solo LX tires should be inflated to 35 psi. Check the inflation pressure in all three tires and adjust the pressure as necessary. Correct inflation pressure is printed on the tire sidewall.

 **WARNING**

Before each use make sure wheels are installed securely and properly inflated and brake quick release is fully closed.

Brake Operation

Your Translt Solo LX is equipped with two brakes: A hand operated front brake (which also functions as a parking brake) and a foot operated parking brake.

Front Brake

1. To bring the stroller to a stop, squeeze the brake lever toward the stroller handle.
2. To engage the front parking brake, squeeze the brake lever to the handle, depress and hold the lever lock button, and release the brake lever. See Figure 9.
3. To release the front parking brake, squeeze the brake lever all the way to the handle until the lever lock button pops up.

Rear Brake

1. To engage the rear parking brake, use your foot to push down on the rear brake bar until it engages the slots in the rear wheel hubs.
2. To release the rear brake, lift the brake bar with your foot. See Figure 10.



Figure 3



Figure 4

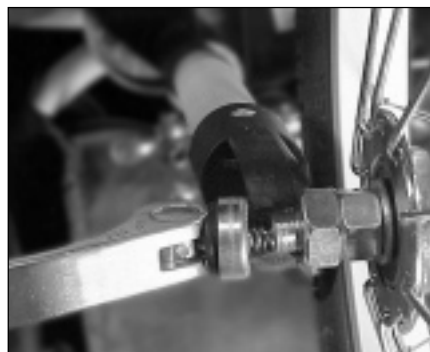


Figure 5



Figure 6



Figure 7

! WARNING

Always use both parking brakes when the stroller is stopped.
Never leave a child unattended in the stroller.

Adjusting the Seat Harness

Proper harness adjustment is important for your child's safety. The Solo LX adjustable 5-point restraint harness adjusts easily to comfortably and securely accommodate children of different ages and sizes.

1. Unclip all of the straps and place your child in the stroller.
2. Adjust the length of the crotch strap so that when the waist strap buckles are clipped to the crotch strap buckle the waist strap comes just below your child's belly button, where a normal belt would lay. See Figure 11.
3. Clip the waist strap buckles into the crotch strap buckle and adjust the snugness of the waist strap so you can just fit two fingers between the strap and your child.
4. Adjust the shoulder strap height (the upper strap attachment points can slide up or down) so that the upper attachment point of each strap is positioned just above your child's shoulders.
5. Clip the shoulder straps to the waist strap buckle and adjust the strap tension until the straps are snug.

Folding the Stroller

1. For the most compact fold, first remove the front and rear wheels. Remember to open the brake quick release lever before removing the front wheel. To open the quick release lever, flip the lever toward the rear of the stroller. To remove the rear wheels, lift the red wheel release latches (located on the rear frame tube, slightly inboard from each wheel) and slide the wheel axles out of the frame tube.
2. If you don't need the stroller completely compact, the stroller can be folded with the wheels still attached.
3. Unsnap the lower seat straps from each side of the stroller frame.
4. Release the hook and loop strap that secures the front panel of the seat (the leg rest area) from behind the foot plate.
5. Release the black frame latches at the point where the frame pivots to fold.
6. Push down on the handle until the stroller folds.

Additional Features

Wrist Lanyard

Before using the stroller, always make sure the wrist lanyard is securely attached to the stroller and to your wrist. If you should trip or stumble while pushing the stroller, the wrist lanyard will prevent the stroller from rolling away.



Figure 8



Figure 9



Figure 10



Figure 11

Sun Canopy

An adjustable window in the top of the sun canopy allows you to keep an eye on your child. The size of the window opening can be adjusted using the hook and loop strips on the window flap edges. To open the flap fully, roll the flap and secure it with the hook and loop straps.

Storage

The Baby Translt Solo LX offers two places to carry extra gear: a seat-back pocket and an under-seat basket. Do not carry a total of more than 12 pounds in the pocket and basket. Overloading the stroller may cause it to become unstable and tip over.

Reclining Seat

To recline the seat, release the buckles on each side of the seat-back.



Figure 12

WARNING

Always use the wrist lanyard anytime a child is in the stroller. Never leave your child unattended. Never overload the stroller. Maximum load capacity is 87 lbs. (passenger and cargo weight combined). Overloading may cause the stroller to become unstable and tip over. Do not allow your child to stand in the stroller, as this may cause the stroller to tip.



Figure 13

Cleaning

Canopy

To remove the sun canopy, first remove the Philips screws from the canopy adjustment hubs on both sides of the stroller. See Figure 12. Unfasten the hook and loop strip that secures the canopy to the top frame tube, and lift the canopy away from the stroller. Remove the metal frame from the sun canopy before washing. The canopy may be washed in cold water with mild detergent.

Seat

To remove the seat for cleaning, unfasten the snaps and hook and loop straps that secure the seat to the frame. See Figure 13. Before washing the seat, remove the plastic stiffener panels and foam panels from the zippered pockets in the back and bottom of the seat. Wash the seat in cold water with mild detergent.

WARNING

Transporting an infant without the stiffener panels installed poses a suffocation hazard. Never use the stroller to carry an infant with the stiffener panels removed.

Under-seat Basket

To remove the under-seat basket for cleaning, unfasten the hook and loop strips that secure the basket to the stroller frame. The basket may be washed in cold water with mild detergent.