

**INSTRUCTIONS FOR TIRE INFLATION:**

1. Identify valve type (see Figure 1).
2. For Presta valves, press pump head directly onto valve stem and inflate to desired pressure.
3. For Schraeder valves, remove Presta/Schraeder adapter from pump handle and thread onto Schraeder valve stem. Then press pump head directly onto valve stem and inflate to desired pressure.
4. Do not inflate beyond maximum recommended inflation pressure listed on tire sidewall.

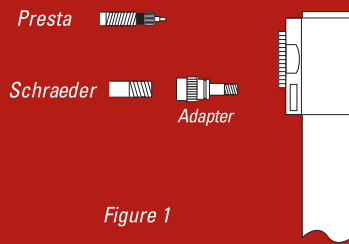


Figure 1

**PUNCTURE REPAIR:**

1. Remove patches and sandpaper from pump handle.
2. Locate puncture in tube. Lightly roughen tube surface around puncture with sandpaper.
3. Apply patch—be careful not to touch adhesive side of patch. Press patch firmly and hold for 30-40 seconds.
4. Reinstall tube and inflate to desired pressure.

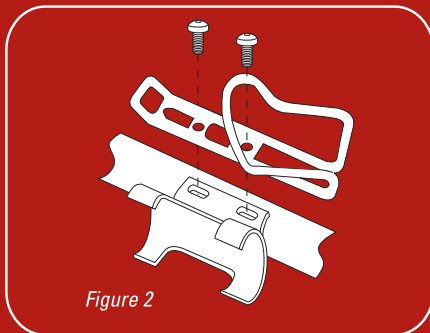


Figure 2

**BRACKET INSTALLATION**

1. Using the included hardware, attach the pump mounting bracket to the frame using the water bottle cage braze-ons (see Figure 2).
2. Press pump into bracket until it snaps securely in place.

40-1576



Made in Taiwan