


Battery Installation

1. Insert a coin in the slot at the side of the cover and twist to remove cover. (Fig. 1)
2. Install 2 "AAA" (1.5V) batteries and position them according to diagram inside case.
3. Replace cover and press firmly until it snaps into place.

Bracket Installation

1. Attach mounting bracket to seatpost (Fig. 2). Use supplied rubber shims as necessary to ensure a secure fit.
2. Tighten mounting bracket bolt until bracket is secure on seatpost.
3. Attach rear light to bracket. Ensure light is securely attached to bracket before riding.
4. Adjust orientation of bracket to position light in an optimal direction.

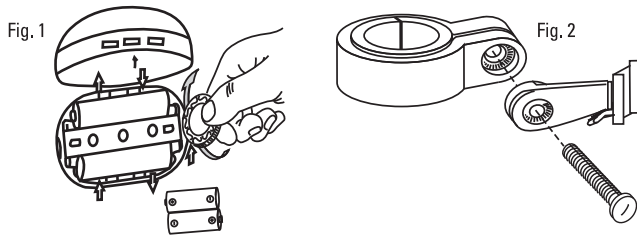

Made in Taiwan

40-1731 0806_1


Tech Support Line 1-800-553-8324

Battery Installation

1. Insert a coin in the slot at the side of the cover and twist to remove cover. (Fig. 1)
2. Install 2 "AAA" (1.5V) batteries and position them according to diagram inside case.
3. Replace cover and press firmly until it snaps into place.

Bracket Installation

1. Attach mounting bracket to seatpost (Fig. 2). Use supplied rubber shims as necessary to ensure a secure fit.
2. Tighten mounting bracket bolt until bracket is secure on seatpost.
3. Attach rear light to bracket. Ensure light is securely attached to bracket before riding.
4. Adjust orientation of bracket to position light in an optimal direction.

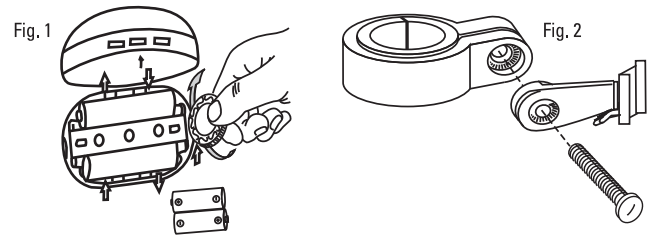

Made in Taiwan

40-1731 0806_1


Tech Support Line 1-800-553-8324

Battery Installation

1. Insert a coin in the slot at the side of the cover and twist to remove cover. (Fig. 1)
2. Install 2 "AAA" (1.5V) batteries and position them according to diagram inside case.
3. Replace cover and press firmly until it snaps into place.

Bracket Installation

1. Attach mounting bracket to seatpost (Fig. 2). Use supplied rubber shims as necessary to ensure a secure fit.
2. Tighten mounting bracket bolt until bracket is secure on seatpost.
3. Attach rear light to bracket. Ensure light is securely attached to bracket before riding.
4. Adjust orientation of bracket to position light in an optimal direction.

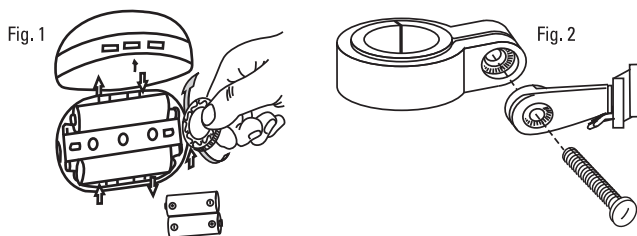

Made in Taiwan

40-1731 0806_1


Tech Support Line 1-800-553-8324

Battery Installation

1. Insert a coin in the slot at the side of the cover and twist to remove cover. (Fig. 1)
2. Install 2 "AAA" (1.5V) batteries and position them according to diagram inside case.
3. Replace cover and press firmly until it snaps into place.

Bracket Installation

1. Attach mounting bracket to seatpost (Fig. 2). Use supplied rubber shims as necessary to ensure a secure fit.
2. Tighten mounting bracket bolt until bracket is secure on seatpost.
3. Attach rear light to bracket. Ensure light is securely attached to bracket before riding.
4. Adjust orientation of bracket to position light in an optimal direction.

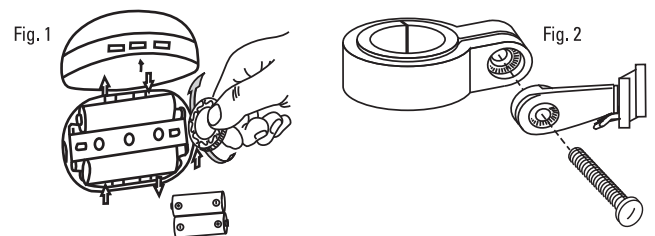

Made in Taiwan

40-1731 0806_1

Tech Support Line 1-800-553-8324