

Forté Classic quill road stem


⚠ WARNING

A stem which is the wrong size for your steerer tube, or which is installed incorrectly, can cause loss of steering control, resulting in serious injury or death. To ensure that you have selected the proper size stem for your steerer tube, and that the stem has been installed correctly, consult a qualified bicycle mechanic.

STEM INSTALLATION

1. Remove the old stem, noting how far the stem extended above the headset lock nut. This will help you evaluate your stem height when setting up your new stem.
2. Clean the inside of the steerer tube.
3. Lightly grease the quill of the stem, and insert through the headset and into the steerer tube. Make sure that the **MINIMUM INSERTION** line is below the top of the headset and not visible.
4. Remove the stem's plastic quill plug and tighten the 6mm stem bolt just enough to keep the stem from turning easily in the steerer tube.
5. Loosen the 6mm handlebar clamp bolt.
6. Install your handlebar.
7. Snugly tighten the handlebar clamp bolt. Position handlebar as desired and then tighten the bolt securely (75 inch/lbs. of torque recommended).
8. Position the bar and stem assembly in the position you desire and tighten the stem bolt securely (100 inch/lbs. of torque recommended). Reinstall the quill plug.

The Classic Quill Road Stem will work with any threaded steerer tube with an outside diameter of 1" (25.4mm) and an inside diameter of 22.2mm. The stem is compatible with any road handlebar with a 26.0mm clamp area. Please read and follow the installation instructions carefully.

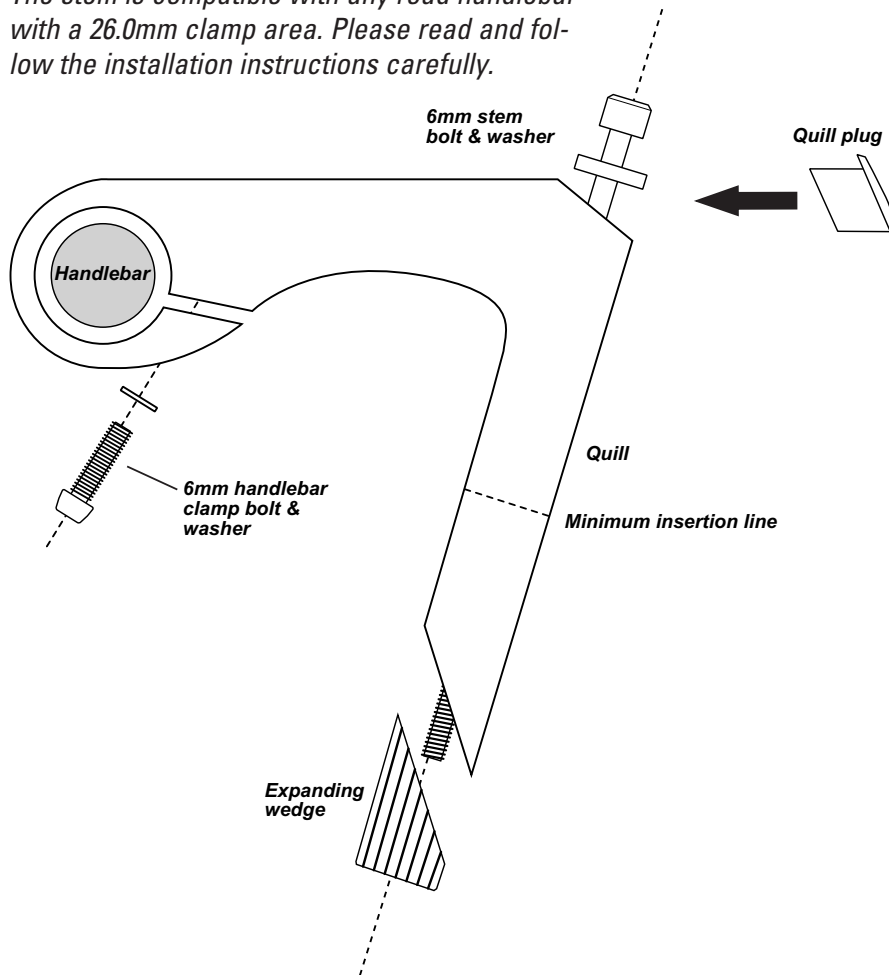

For technical support, call 1-800-727-2453 from 9am - 6pm EST Monday through Friday.

