

Performance Inc.
One Performance Way
Chapel Hill, NC 27514
Made in Taiwan
PerformanceBike.com
PERFORMANCE and the Flying P are
registered marks of Performance Inc.



Installation:

1. Expose half an inch of each end of the handlebar either by moving the grips inward or by cutting off the ends of the grips (see fig. 1).
2. Install your Bar Ends on the ends of your handlebar with the clamps facing down and the extensions facing forward and angling inward. An angle of 10° to 30° from horizontal is recommended as a good initial setting, but each rider should adjust according to personal preference (see fig. 2).
3. Firmly tighten the securing bolts, but do not over-tighten.
4. Cap the ends of your handlebar with the provided plugs.

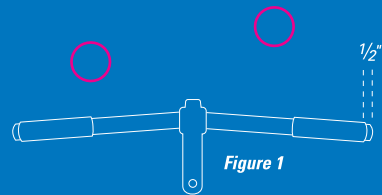


Figure 1


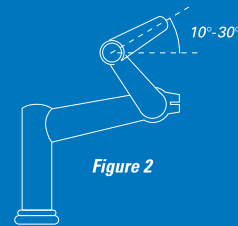


Figure 2





Tech Support Line
1-800-727-2453

50-2034

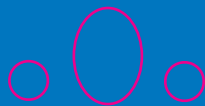

Forté
Ergo Carbon Bar Ends

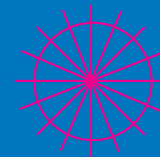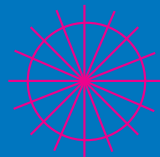

KEYLINES DO NOT PRINT!

PMS 2935 

BLACK 

WHITE 