

3025 PC
C100 M24 Y11 K52

443 PC @ 100%
C29 M10 Y14 K28

443 PC @ 50%
C14.5 M5 Y7 K14

100% Black



White

FORTE™
Kör Bar Ends

FORTE™
Kör Bar Ends

Installation:

1. Expose 15mm (5/8") of each end of the handlebar either by moving the grips inboard or by cutting off the ends of the grips. See Figure 1.
2. Install the bar ends with the clamp bolts facing downward. See Figure 2.
3. Use a 4mm hex wrench to securely tighten the clamp bolts. 70-80 in.lbs. is recommended for installation on most alloy handlebars. Refer to handlebar manufacturer's instructions before installing on carbon handlebars.

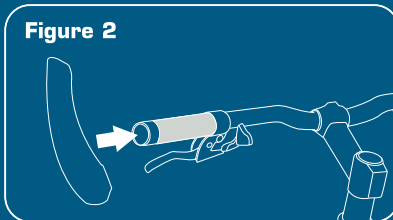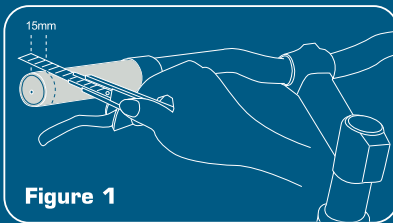

Made in Taiwan 50-7470



**Comfortable, Compact
and Lightweight**

**Kraton® Surface
Provides Secure Grip
and Dampens Vibration**

Integrated Aluminum Clamp

126 Grams per Pair

Rear

Front